





### Specifications

Voltage range for use	110V—480V
Time limit for use	110V Continuous 220V 30 minutes 480V 4 minutes
Frequency range for use	40—70Hz
Accessory lead	1.2 m
External dimensions and weight	95mm high, 70mm wide and 55mm deep; 280g

## To make it easier to use three-phase power equipment

The 3122 Phase Detector shows the phase sequence or rotation on three-phase circuits (Motors, generators and relays, etc.) and is used when installing and operating this kind of equipment. For example, if this detector is

### 3122 Phase Detector

The instrument is housed in a sturdy ABS plastic case which will withstand rough use at work sites and it is handy to carry about and simple to use. Since the indices on the leads and the indicator plates coincide, the L, S and T are easily distinguished when connecting.

If the disc rotates in the direction indicated by the arrow when the instrument is connected to three phase power, the connected phase sequence is R-S-T.

### Specifications

Voltage range for use	110V-480V
Time limit for use	110V Continuous 220V 30 minutes 480V 4 minutes
Frequency range for use	40-70Hz
Accessory lead	1.2m
External dimensions and weight	95mm high, 70mm wide and 55mm deep; 280g

## To make it easier to use three-phase power equipment

The 3122 Phase Detector shows the phase sequence or rotation on three-phase circuits (Motors, generators and relays, etc.) and is used when installing and operating this kind of equipment. For example, if this detector is

used to first check the phase sequence of three-phase induction motors in pumps and fans and they are then correctly wired on installing, the possibility of damage due to reverse rotation is eliminated.

## Three Phase Detector

The instrument is housed in a sturdy ABS plastic case which will withstand rough use at work sites and it is handy to carry about and simple to use. Since the values on the leads and the indicator plates coincide, the H.V. and T are easily distinguished when connecting.

With the dial rotated in the direction indicated by the arrow when the instrument is connected to three phase power, the numbered phase sequence H-V-S-T.